


TR107DN/TR111DN

USER MANUAL

(revised on 16/03/2017)

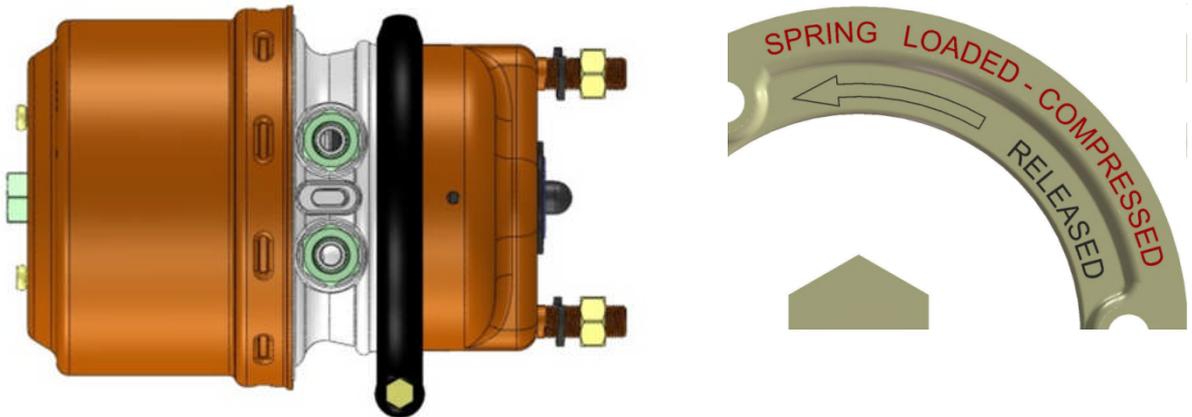

CONDITION: Spring Brake De-Activated (Spring Loaded – Compressed)

To de-activate the spring brake:

Turn the nut Clockwise until the nut is unable to turn further as shown the blow diagram left arrow. **No air tools, max. torque = 75 Nm**

To activate the spring brake:

Turn the nut Anti-Clockwise until the nut is unable to turn further as shown the blow diagram right arrow. **No air tools, max. torque = 75 Nm**

