

TR514DN/TR515DN

USER MANUAL

(revised on 16/03/2017)



CONDITION: Spring Brake De-Activated (Spring Loaded – Compressed)

To de-activate the spring brake:

Turn the nut Clockwise until the nut is unable to turn further. A small pin emerges. See the blow diagram as the LEFT arrow direction. **No air tools, max. torque = 75 Nm**

To activate the spring brake:

Turn the nut Anti-Clockwise until a “click” sound. A small pin disappears. See the blow diagram as the RIGHT arrow direction. **No air tools, max. torque = 75 Nm**

